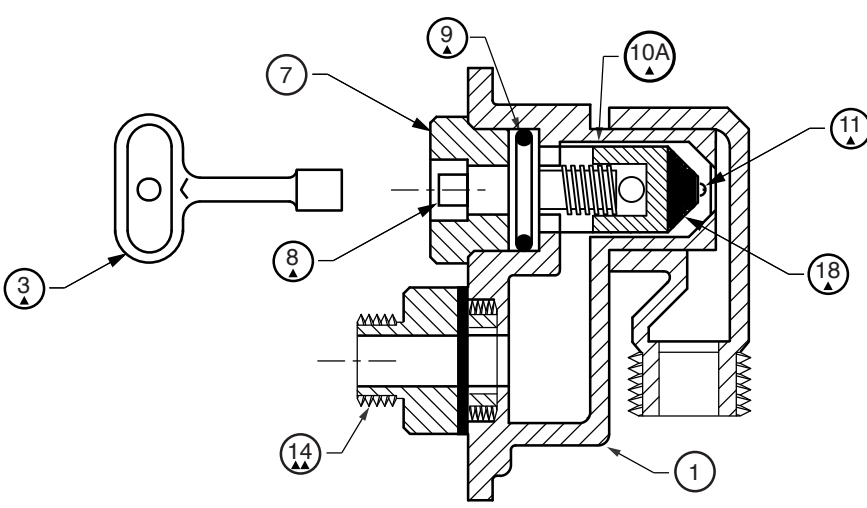
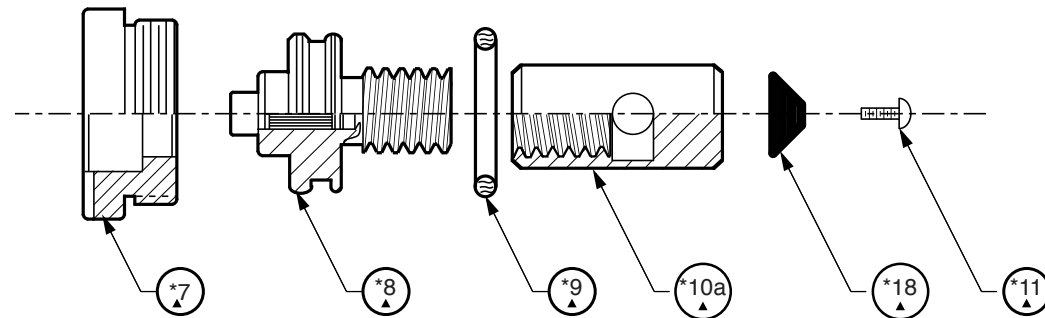


A	 JAY R. SMITH MFG. CO. MEMBER OF MORRIS GROUP INTERNATIONAL POST OFFICE BOX 3237 MONTGOMERY, ALABAMA 36109-0237 (USA) TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com  MEMBER OF:  MEMBER OF:  MEMBER OF:					LOCATION 																															
	PARTS LIST WITH MAINTENANCE INSTRUCTIONS																																				
																																					
	▲▲ THESE REPLACEMENT PARTS AVAILABLE IN HPRK-18VB 																																				
▲ THESE REPLACEMENT PARTS AVAILABLE IN HPRK-18																																					
MAINTENANCE INSTRUCTIONS: 1. Shut off water supply. 2. Remove face nut. 3. Pull stem out for complete access to all working parts. 4. Check all working parts for replacement. 5. Replace complete stem assembly and face nut. * These Parts are accessible from face of hydrant by removing face nut. <table border="1" style="width: 100%; border-collapse: collapse; font-size: 10pt;"> <thead> <tr> <th colspan="4">HYDRANT PARTS LIST</th> </tr> <tr> <th>No.</th> <th>Description</th> <th>No.</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Head/Casing Assembly</td> <td>10a</td> <td>Coupling</td> </tr> <tr> <td>3</td> <td>Key</td> <td>11</td> <td>Washer Screw</td> </tr> <tr> <td>7</td> <td>Face Nut</td> <td>14</td> <td>Vacuum Breaker</td> </tr> <tr> <td>8</td> <td>Operating Screw</td> <td>18</td> <td>Plunger Washer</td> </tr> <tr> <td>9</td> <td>Operating Screw "O" Ring</td> <td></td> <td></td> </tr> </tbody> </table>										HYDRANT PARTS LIST				No.	Description	No.	Description	1	Head/Casing Assembly	10a	Coupling	3	Key	11	Washer Screw	7	Face Nut	14	Vacuum Breaker	8	Operating Screw	18	Plunger Washer	9	Operating Screw "O" Ring		
HYDRANT PARTS LIST																																					
No.	Description	No.	Description																																		
1	Head/Casing Assembly	10a	Coupling																																		
3	Key	11	Washer Screw																																		
7	Face Nut	14	Vacuum Breaker																																		
8	Operating Screw	18	Plunger Washer																																		
9	Operating Screw "O" Ring																																				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: center;">A</td> <td style="width: 10%; text-align: center;">12-3-12</td> <td style="width: 40%; text-align: center;">Rev. Replacement Parts</td> <td style="width: 10%; text-align: center;">TBW</td> <td style="width: 10%; text-align: center;">CL</td> </tr> <tr> <td style="text-align: center;">REV.</td> <td style="text-align: center;">DATE</td> <td style="text-align: center;">DESCRIPTION</td> <td style="text-align: center;">BY</td> <td style="text-align: center;">CKD. BY</td> </tr> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">WEIGHT POUNDS</td> <td style="text-align: center;">VOLUME CUBIC FEET</td> </tr> </table> FIGURE NUMBER 5518BS										A	12-3-12	Rev. Replacement Parts	TBW	CL	REV.	DATE	DESCRIPTION	BY	CKD. BY	WEIGHT POUNDS	VOLUME CUBIC FEET																
A	12-3-12	Rev. Replacement Parts	TBW	CL																																	
REV.	DATE	DESCRIPTION	BY	CKD. BY																																	
WEIGHT POUNDS	VOLUME CUBIC FEET																																				