

INSTALLATION AND OPERATING INSTRUCTIONS

Suction Guides

INTRODUCTION

Armstrong Suction Guides are designed for bolting directly onto the suction flange of horizontal or vertical shaft centrifugal pumps.

OPERATING LIMITS

Armstrong Suction Guides are designed in three series:

Series Designation	Inlet Pipe Connection	Pump Connection
SG	150 psig ANSI Flange	125 psig Pump Flange
SGG	Grooved Pipe*	125 psig Pump Flange
SGHH	300 psig ANSI Flange	250 psig Pump Flange

*Suitable for straight cut grooved Anvil or Victaulic fittings

Each series is designed to be a *four-function* fitting. Each Suction Guide is a 90° elbow, a Pipe Strainer and a Flow Stabilizer. It may also be used as a Reducing Elbow, should the suction piping be larger than the pump inlet.



INSPECTION

Armstrong Suction Guides are thoroughly tested and inspected before shipment to assure they meet with your order requirements. All units must be carefully examined upon arrival for possible damage during transit. Any evidence of mishandling should be reported immediately to the carrier and noted on the freight bill.

INSTALLATION

Install the Suction Guide with the directional arrow, indicated on the body, being aligned with the system flow direction.

Armstrong Suction Guides may be installed in any position, providing the guide vanes are facing the pump inlet flange.

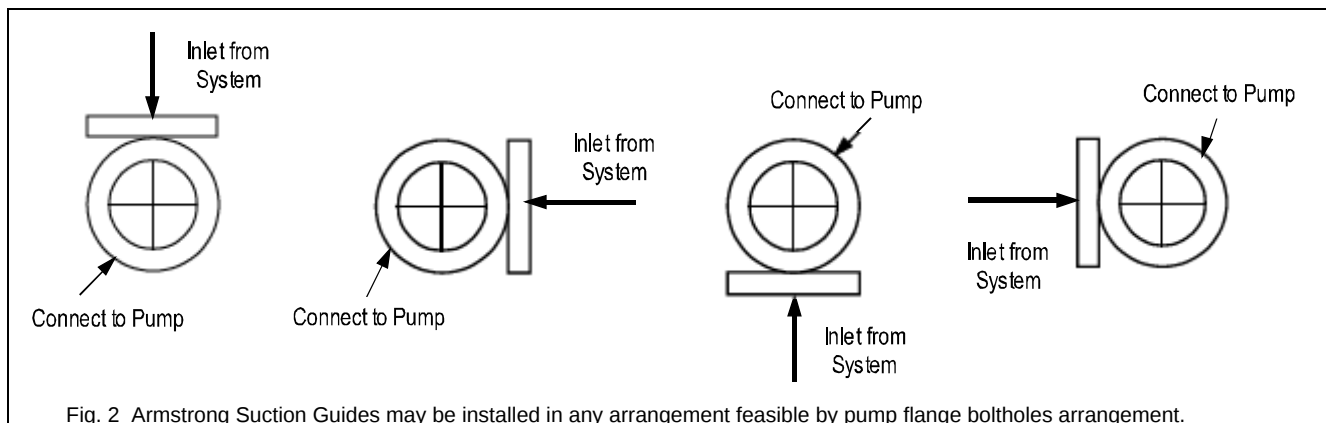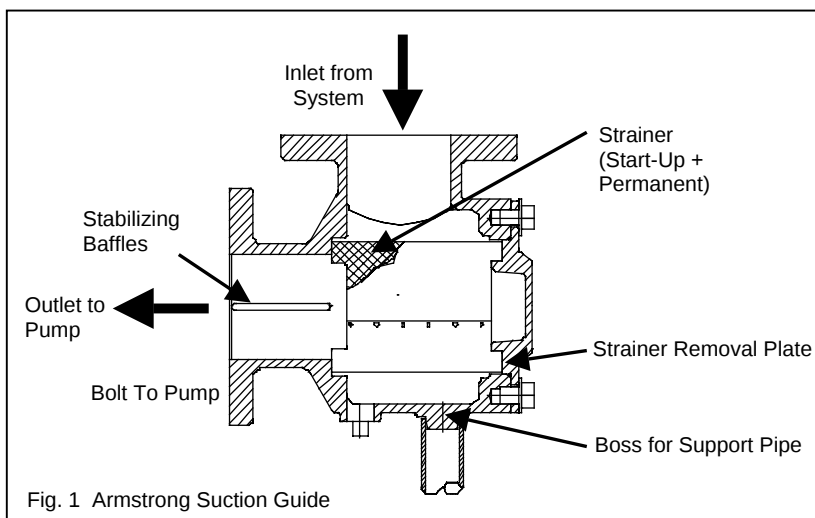

Centrifugal pumps need a minimum of 5 pipe diameters of straight pipe before the pump suction. This length of straight pipe, after the last elbow, tee or fitting, helps to ensure that the flow is stable when entering the pump suction.

Crosspiece guide vanes are fitted into the Armstrong Suction Guide outlet, where it bolts to the pump flange, to stabilize the flow and eliminate the need of long straight suction pipe.

Space must be allowed to remove the end cover and remove the strainer.

A blow-down valve may be installed on the Suction Guide drain connection.

The Suction Guide must not be used to support the suction piping. Piping must be supported independently.

On base mounted pumps, the flexible piping connection may allow the Suction Guide to be supported the pump suction flange. A boss is cast on every SG allowing a supporting pipe-stool to be located under the fitting, thereby removing the weight of the Suction Guide from the pump suction flange.

Suction Guides are supplied with an inlet tapped gauge connection. Monitoring the differential pressure across the fitting, from the suction guide inlet gauge to the pump inlet gauge, will alert the operator should the strainer need to be removed and cleaned.

OPERATION

No special attention need be paid to the Suction Guide at start-up. The fitting is stationary and will strain the pumped fluid and stabilize the flow into the pump automatically.

Temporary strainer must be removed following system clean up.

After all debris has been removed from the system, or a maximum of 24 running hours, stop the pump and close the pump isolation valves. Drain the Suction Guide by removing the drain plug or opening the blowdown valve, if installed. Remove the Suction Guide cover and remove the strainer assembly from the valve body.

A temporary fine-mesh start-up strainer is tack-welded to the permanent stainless steel strainer. This temporary strainer should now be removed from the permanent strainer. The fine-mesh strainer is designed to remove small particulate from new piping systems and could easily clog with debris if left in place. This will be detrimental to the operation of the pump.

Replace the permanent strainer into the fitting body, once the temporary strainer is removed.

Inspect the cover O-ring and replace if necessary. Replace the cover into the body. Ensuring that the strainer is properly seated, tighten the cover bolts diagonally, evenly and firmly.



Fig. 3 Remove Fine-Mesh Strainer

S. A. Armstrong Limited
23 Bertrand Avenue
Toronto, Ontario
Canada, M1L 2P3
T: (416) 755-2291
F (Main): (416) 759-9101

Armstrong Pumps Inc.
93 East Avenue
North Tonawanda, New York
U.S.A. 14120-6594
T: (716) 693-8813
F: (716) 693-8970

Armstrong Holden Brooke Pullen
Wenlock Way
Manchester
United Kingdom, M12 5JL
T: +44 (0) 1612 232223
F: +44 (0) 1612 209660



© S.A. Armstrong Limited 2005